


The Wand Voice Activated System

Installation Guide

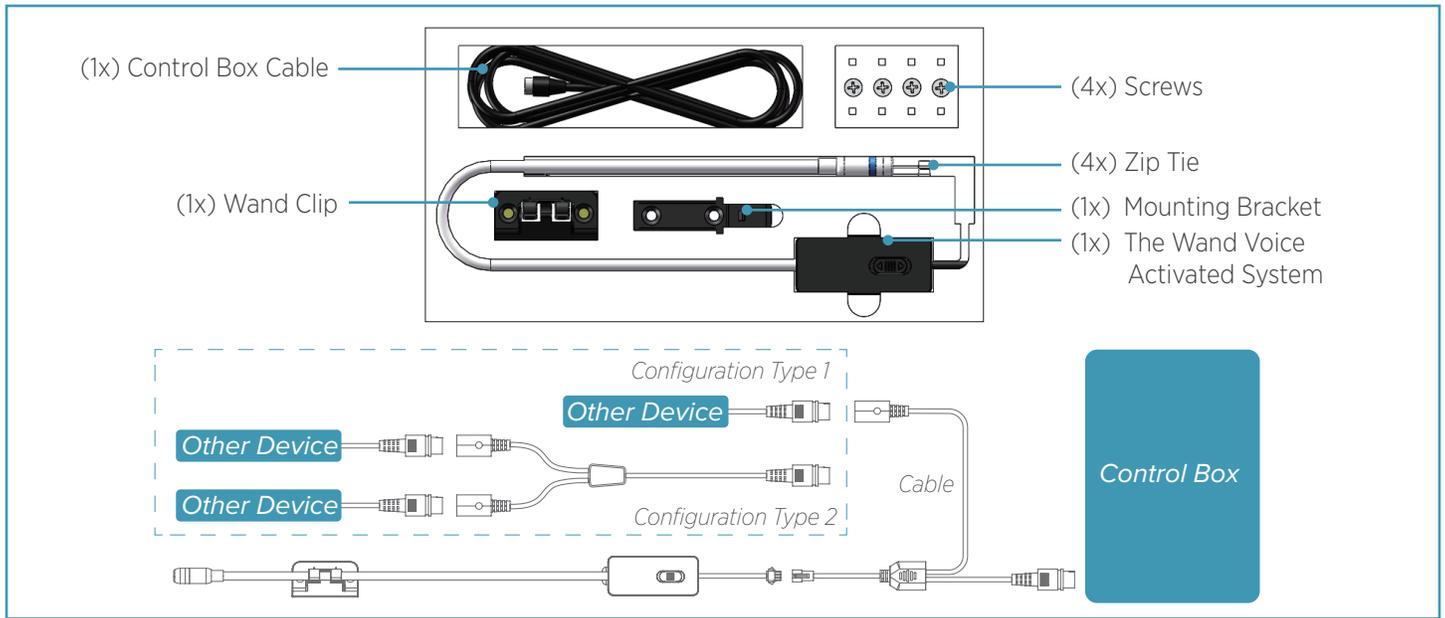

STEP 1

Please take a minute to familiarize yourself with the voice commands listed on Page 2.

STEP 2

Your adjustable base can pose an entrapment hazard which is increased in households with small children and or pets. Using voice controls further increases this entrapment hazard due to the potential of unintentionally triggering a command vocally. The voice controls could be unintentionally triggered by yourself, a small child, the television, a radio program, etc. and by using this product you agree that you have read and reviewed the commands, including the Emergency Commands, and acknowledge the increased entrapment risk associated with using voice commands.

If you agree with this statement please continue to step 3 to learn how to install **The Wand**, however if you have any questions in regard to the use of voice controls please contact customer service prior to activating **The Wand**.

STEP 3

Affix the **Mounting Bracket** to the wood section of the underside of your adjustable base at the head section using 2 of the **Screws** provided, on either the right or left side of your foundation.



STEP 4

Mount **The Wand Clip** 10 inches away from the **Mounting Bracket** so that you can safely secure **The Wand** when turned off.



STEP 5

Use the slider switch to select the invocation phrase you wish to use, either "ergo" or "motion". If you have a split base, each side must have a different invocation phrase in order to work independently.

STEP 6

Slide **The Wand** device onto the **Mounting Bracket** until you feel it click into place.



STEP 7

Connect **The Wand** to the **Control Box Cable** via the 3-pin connector.



STEP 8

Connect the **Control Box Cable** to any unoccupied 5-pin multifunction port. If all ports are being used, select an accessory to unplug and then plug that accessory into the female end of the **Control Box Cable** you are holding, you can now use the newly freed up multifunction port to plug the **Control Box Cable** into.



STEP 9

Please use the **Zip-Ties** provided to secure any excess cord slack underneath the bed frame.



The Wand Voice Activated System

Installation Guide



Once the invocation phrase has been uttered, the microphone will be active for 8 seconds which is indicated by the blue light. While the microphone is active you can now use any of the command utterances listed below to control your adjustable base.

SAFETY INFORMATION:

- If you wish to stop using voice commands, you can turn the device off by switching the slider on **The Wand** to the middle “OFF” position.
- Your adjustable base can pose an entrapment hazard and there is an increased risk for households with small children and or pets. Using voice controls increases this entrapment hazard due to the potential of accidentally triggering a command vocally. The voice controls could be unintentionally triggered by a small child, television, radio program, etc., please read the “Emergency Commands” section so that you are familiar with these commands in the event of an emergency.

	VOICE COMMAND	EXPLANATION
EMERGENCY COMMANDS	Ergo STOP	Stop all movement
	Motion STOP	Stop all movement
	Ergo ALL UP	Raise both the head & foot 6 inches
	Motion ALL UP	Raise both the head & foot 6 inches

VOICE COMMAND INSTRUCTIONS					
	VOICE COMMAND	EXPLANATION		VOICE COMMAND	EXPLANATION
Common Instructions	STOP-RUNNING	Driver and massage stop action	Massage Control	TURN-ON-MASSAGE	Turn on massage driver
	GOOD-NIGHT	Flat bed		TURN-OFF-MASSAGE	Turn off massage driver
	RISE-AND-SHINE	Adjust the bed to the preset position for Zero-G		MASSAGE-UP	Increase the massage strength
	TV-TIME	Adjust the bed to the preset position for watching TV		MASSAGE-DOWN	Decrease the massage strength
Actuators Control	RAISE-HEAD	Back actuator rises 3S	Head Massage	TURN-ON-HEAD-MASSAGE	Turn on head massage
	LOWER-HEAD	Back actuator falls 3S		HEAD-MASSAGE-UP	Increase the head massage strength
	RAISE-FOOT	Foot actuator rises 3S		HEAD-MASSAGE DOWN	Decrease the head massage strength
	LOWER-FOOT	Foot actuator falls 3S	Foot Massage	TURN-ON-FOOT-MASSAGE	Turn on foot massage
	RAISE-LUMBAR	Lumbar actuator rises 3S		FOOT-MASSAGE-UP	Increase the foot massage strength
	LOWER-LUMBAR	Lumbar actuator falls 3S	Massage Mode	FOOT-MASSAGE-DOWN	Decrease the foot massage strength
	RAISE-TILT	Head actuator rises 3S		WAVE-ONE	Switch to massage mode 1
	LOWER-TILT	Head actuator falls 3S		WAVE-TWO	Switch to massage mode 2
Preset Mode	FLAT-PRESET	Flat bed	Save Preset Position	WAVE-THREE	Switch to massage mode 3
	ANTI-SNORE	Adjust the bed to the preset position for anti-snore		SAVE-LOUNGE	Set the current position to relax mode
	ZERO-G/ ZERO-GRAVITY	Adjust the bed to the preset position for Zero-G		SAVE-FAVORITE	Set the current position to favorite mode
	LOUNGE-PRESET	Adjust the bed to the preset position for relax	SAVE-TV	Set the current position to watching TV mode	
	FAVORITE-PRESET	adjust the bed to the preset position for favorite one	Underlight Control	TURN-OFF-LIGHT	Turn off underlight
	TV PRESET	Adjust the bed to the preset position for watching TV		TURN-ON-LIGHT	Turn on underlight

ENTRAPMENT HAZARD: This bed can crush and kill when it moves. Using voice controls may increase this risk. Review safety commands before activating voice controls.

***ATTENTION:** The Voice Commands are limited to your adjustable bed’s feature-set. Please refer to your remote control and or owner’s manual for the features your adjustable base supports.